



# STAIRNOSING – MJ52

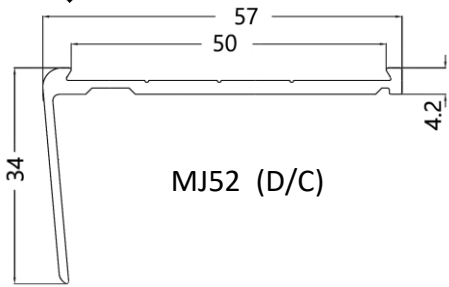

MJ52 (D/C)

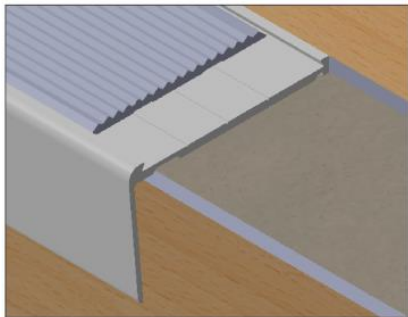

MJ52 with MJ152 insert

- ✓ Vinyl nosing with long riser
- ✓ Supplied in 3.66m lengths
- ✓ Available in Silver and Black anodised finish
- ✓ Countersink drilled at 220mm spacing
- ✓ Designed for use with 50mm wide insert options as follows: MJ152 Aluminium, 50SI PVC, ASAT5020 Anti-Slip tape. Refer to Stairnosing Inserts data sheet for further details
- ✓ Visible surfaces are fitted with foil protection, to be removed after installation
- ✓ Supplied drilled (D) and countersunk (C). Screws and plugs sold separately

### Compliance

- ✓ Use with insert MJ152, 50SI or ASAT5020 inserts for compliance with AS4586:2013
- ✓ Profile colour selection required for compliance with AS1428.1-2021

Luminance Reflectance Value		
Colour	Dry	Wet
Silver	71.94	69.17
Black	5.13	1.73

CODE	DESCRIPTION	PK QTY
MJ52 / SI	STAIRNOSING VINYL LONG RISER 3.66M X 57MM X 3MM SILVER - USE WITH 50MM INSERT	10
MJ52 / BL	STAIRNOSING VINYL LONG RISER 3.66M X 57MM X 3MM BLACK - USE WITH 50MM INSERT	10

### Installation instructions

Ensure surface is levelled, clean and smooth prior to fixation. Cut the MJ52 to your required length. Secure in place utilising an MJS 6mm masonry drill bit, 6mm plugs and screws (Sold Separately). Screw fixing can be used in conjunction with MJS GF400 construction adhesive for additional strength.

### Insert installation

**MJ152 Aluminium Stair Insert – 50mm wide P4 Slip Rating to requirements of AS4586:2013 (Sold Separately)**

**50SI Stair insert - 50mm wide P5 Slip Rating to requirements of AS4586:2013 (Sold Separately)**

To ensure the stair insert is correctly adhered to the aluminium nosing, we recommend the use of MJS 102 Contact Adhesive.

Cut the insert to your required length, ensure both bonding surfaces are clean then apply even coats of adhesive to both surfaces by brush or roller. Allow solvent to evaporate and adhesive to become tacky and dry to touch. Time to tack up is 10-15 minutes at 20°C, open time is approximately 45 minutes.

Ensure the insert is correctly positioned before bringing it into contact with the nosing, as no adjustment is possible once the surfaces have met. Complete by using a hand roller, pressing enough to bring both surfaces into contact.

**ASAT5020 Anti-Slip tape – 50mm wide P5 Slip Rating to requirements of AS4586:2013 (Sold Separately)**

Ensure surface is dry and free from dust, loose particles, oils and grease. Cut the ASAT5020 Anti-slip tape to your required length, correctly position prior to bringing tape into contact with the nosing and apply to surface. Complete by using a hand roller, pressing enough to bring both surfaces into contact.

**Safety statement:** When cutting or drilling aluminium we recommend the use of safety glasses and gloves.

**Disclaimer:** Whilst this profile complies to the above noted standards we recommend that the stairnosing selection is approved by the Project Certifier or Access Consultant prior to installation. It is the responsibility of the customer to confirm the compliance requirements for their project.

